

1. Close any Cascade software windows
2. Open .exe file Cascade
3. After successful installation open Cascade software
4. Click one by one in top left corner Menu “Help” -> “Firmware updating”
-> “Start”
5. Dates must be the same, after successful firmware updating
6. Start working